


**ELECTROEROTIC®**

# Power Tripper™

Attachment for the NeonWand™

Share the Spark!™

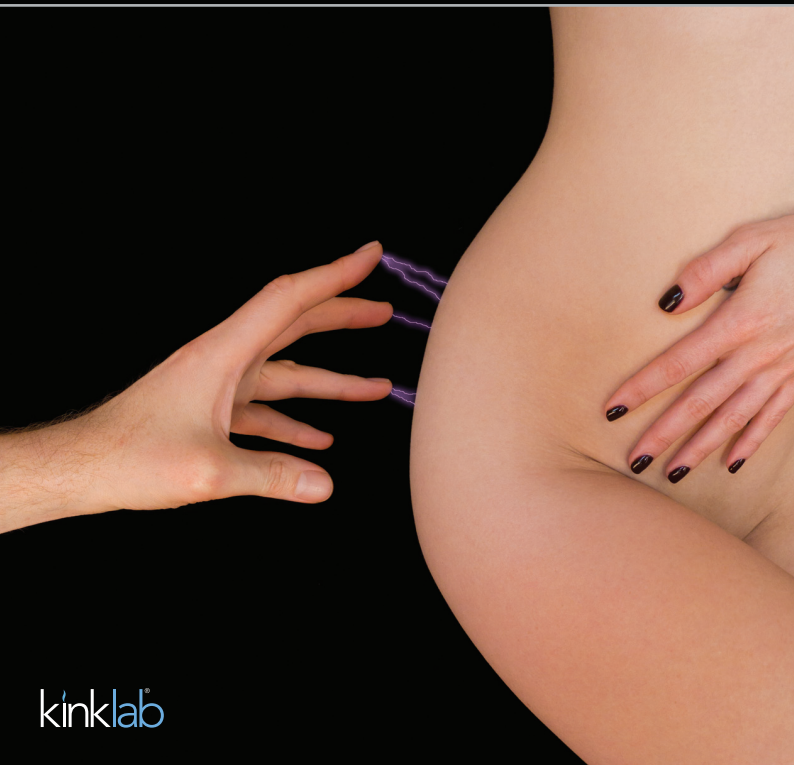

kinklab

## Becoming a Human Electrode by Using Your Power Tripper™:

Become a Human Electrode and watch how sparks will literally fly between you and your partner with KinkLab's® ElectroErotic® Power Tripper™ – an exciting accessory for the Neon Wand™ that electrifies your entire body! When the Power Tripper™ is worn next to your bare skin, gentle but incredibly stimulating electricity flows between you and your partner. Imagine caressing, kissing, touching, tickling, teasing, and tormenting your partner as they tingle every time any part of your body comes in contact with any part of theirs!

### IMPORTANT:

Before your first use of the Power Tripper™, it is critical to read all of the Operating Instructions and Important Health and Safety Precautions to ensure you and your partner's safety and fun. Please note that even if you've played with similar devices in the past, the Power Tripper™ will surprise and delight you with responses unmatched by designs that came before it, and that its precision requires proper handling.

### WARNING:

The Power Tripper™ is to be used ONLY with the Neon Wand™ or other products tuned for this device that are manufactured by KinkLab® or other Stockroom, Inc. brands. Other brands of solid-state generators such as violet wands that simulate a Tesla Coil or electric ray wands have been known to create feedback in the handset which can be very uncomfortable for the user. The Neon Wand™ and other similar devices manufactured by KinkLab® or other brands of Stockroom, Inc. are manufactured using innovative techniques which prevent this from happening.

You must be 18 years of age or older to purchase or play with this toy. KinkLab® is not responsible for any injuries that may occur from misuse or mishandling of the Power Tripper™ or if the Power Tripper™ is used with any other solid-state generator or electric ray wand.

## OPERATING INSTRUCTIONS:

1. You and anyone you're playing with should remove all metal worn next to the skin. This includes jewelry, piercings, watches, and clothing containing snaps, zippers, or other metal hardware.
2. Make sure that the Neon Wand™ is switched off all the way.
3. Plug the Power Tripper™ into the socket of the Neon Wand™.
4. Place the ergonomic body contact (the curved rectangular metal piece) of the Power Tripper™ flush tightly against your skin. Any gap between you and the body contact has the ability to create an uncomfortable feedback. Tip: A good place to wear it is inside the waistband of your underwear, against your hip.
5. Turn the power of the Neon Wand™ to just above the “ON” setting. If you hear a buzz, the intensity may be set too high for your first use with the Power Tripper™. Turn it back down to its lowest setting. To avoid an unpleasant or even painful experience, the intensity of your Neon Wand™ should be kept at an absolute minimum when using the Power Tripper™.
6. To check the intensity of the electricity, let your fingers linger just above your partner's skin. Do not actually touch your partner as this will ground the electricity and a gap is required between you and your partner in order to create an arc of electricity.
7. From here you can slightly adjust the power. However, we do not recommend going above the lowest setting as the Power Tripper™ is very conductive, and may cause uncomfortable and somewhat sharp feeling zaps.
8. Once the Power Tripper™ is secured and the intensity is set, the handset can be carefully set down where it will not roll or fall. Take care to also keep the cords of both the Wand and the Power Tripper™ from tangling or falling where they can be stepped on; tripped over; or twisted in between your bodies so that they don't yank the body contact away from the wearer's skin and create a painful sting.

*(continued)*

9. When you are finished playing with or would like to reposition the Power Tripper™, turn the power all the way off before removing the body contact in order to avoid any unwanted shocks.
10. To safely remove the Power Tripper™ from the Neon Wand™, grip the metal end below the cord, where the device is plugged into the handset, and pull firmly. To avoid electric shock, never pull the cord to detach the wand from the handset.
11. When you are completely finished using the Power Tripper™ and you have unplugged it from the Neon Wand™, unplug the Neon Wand™ from the wall and store them both in a dry place out of the reach of children.

## IMPORTANT HEALTH & SAFETY PRECAUTIONS:

- The Power Tripper™ is for adult use only.
- DO NOT use the Power Tripper™ if you or anyone you are playing with is pregnant or has any heart conditions, including a pacemaker.
- DO NOT use the Power Tripper™ with any other violet wand, violet ray wand, or solid-state device not manufactured by KinkLab® or other brands of Stockroom, Inc.
- When using the Power Tripper™, never touch the eyes or eye area, or any part of the skin that is broken, inflamed, or otherwise not in healthy condition.
- The Power Tripper™ is for external use only.
- Do not use the Power Tripper™ to direct electricity at any one part of the body for longer than 10 seconds at a time.
- To avoid stinging feedback or even burns, wear the Power Tripper™ only as directed.

- Never attempt to disassemble, modify, or repair your Power Tripper™ yourself. Any repairs should be done by a qualified professional to prevent voiding the warranty. (See the Warranty and Repairs section of this manual for details.)
- FIRE HAZARD: Always keep away from flammable material and liquids when using the Neon Wand™ with the Power Tripper™ or other attachments, as the sparks generated can ignite them.

Switch off and unplug your wand immediately and take off the Power Tripper™ if any of the following things occur:

- The Neon Wand™ or the Power Tripper™ gets wet or comes in contact with water
- The handset begins to give off smoke, an unusual smell, or makes an unusual noise
- Any part of the Power Tripper™ or Neon Wand™ appear to be damaged in any way.

DO NOT ATTEMPT TO FIX THESE ISSUES YOURSELF. Please see our Repairs and Maintenance section for contact information.

## Let's Get to the Fun Part!

### Perfecting Your “Electric Touch”:

Once the Wand is turned on, linger your hands just above the skin and use light, caressing touches, rather than pressing down, for the best effect. Being close without actually touching – or at least, without touching too hard – allows the sparks to form between your skin and your partner's, which is what creates the delicious tingling sensation that makes the Power Tripper™ so much fun!

Try tapping your partner's skin with one finger, so that your finger lifts a little distance above their skin each time. Notice how the tingling stops when your finger rests directly on the skin, and grows stronger as it moves farther away. Varying the distance between yourself and your partner is a great way to manipulate the intensity of the sensations they experience! Touching someone in more than one place at once may ground you, so that you don't experience the sparks.

The smaller the point of contact, the more intense the sensation. When using the Power Tripper™, smaller points of contact (such as running just the tip of the tongue or a finger across another person's skin) will focus the flow of current to produce a stronger, more pinpointed sensation. A larger point of contact (such as placing your entire palm on someone's body) will spread the current out, so that the sensations are milder, and they may even become undetectable.

### Additional Ways to Wear the Power Tripper™:

Tuck the body contact into the top of a sock or stocking – any fitted elastic item of clothing will do; so long as it keeps the Power Tripper™ firmly against the skin, without allowing it to twist, slip, or fall away. Athletic wristbands or garters could even be used, if you don't want to wear much at all.

### More Fun Tips & Tricks:

- **The Reverse Method:** This is one of the most popular methods of using the Power Tripper™! Have your partner (the person who is getting shocked) wear the body contact. You can shock them in the exact same way with your body and even with the same fun toys, such as pinwheels and tinsel floggers, as if you were the one wearing the body contact. This method also allows you to move around freely and not worry about cords getting in the way.

- **Blindfolds:** A blindfold will increase the suspense as your partner awaits your touch, as well as protect their eyes.
- **Oils and Lotions:** These can heighten the intensity of the sensations produced by the Power Tripper™.
- **Oral Electro-Sex:** Combining the Power Tripper™ with oral sex is unforgettable! We suggest you combine full-contact oral – which will bring you directly together with your partner so no sparks will be generated, but still feel amazing – with moments where you pull away a little bit. This creates a tingle-producing gap between your hovering tongue or mouth and your partner's most sensitive areas, and you can vary the sensation by moving closer or further away; changing positions; changing the size of the contact area; or making sparks for different lengths of time. Don't forget a single point of contact works best – which means sparks won't fly off your tongue if you're holding onto your partner with your hands!
- **Metal Toys:** If you are the Human Electrode, any conductive object you hold in your hand becomes electrified as well! This means you can use metallic items such as the Kinklab® Pinwheel on your partner's skin, to create some interesting – and sometimes intense – sensations. Other items that can be used this way include metal or tinsel floggers; metal canes and paddles; and even metal household objects, such as a fork or spoon. Be very careful when using metal toys with the Power Tripper™. They can be too intense for some people, and even those who like them when they're used correctly can be burned by too long an exposure, especially when the toys are small or have points.
- **Adding More People:** You can use the Power Tripper™ to transmit current through multiple people who are holding hands or otherwise touching over a significant surface area of their bodies. The intensity of the sensation decreases, though, as more people are added to the chain and the current is distributed across their combined area.

## Care & Cleaning:

- Gently clean the Power Tripper's™ metal plates after each use with at least 75% rubbing alcohol.
- Do not turn the wand on until the alcohol is fully evaporated, as this could ignite the alcohol.

## Limited Warranty:

KinkLab® warrants all defects in workmanship or materials arising under normal usage and care for a period of 12 months from the date of purchase. You must be able to provide proof of purchase in the form of a receipt specifying the item, date purchased, and cost of item. To register your warranty please visit:

<http://www.kinklab.com/warranty/>



## For Repairs or Maintenance:

Please contact Kinklab® Customer Service via email or postal mail at one of the following addresses:

Kinklab  
2807 W Sunset Blvd  
Los Angeles, CA 90026  
USA

[service@kinklab.com](mailto:service@kinklab.com)

Phone: 1-213-484-3882

The manufacturer reserves the right to modify the information in this manual without notice.

